Item #1000 000 000
Model #IEX1393A-2

USE AND CARE GUIDE

3-LIGHT INTERIOR VANITY

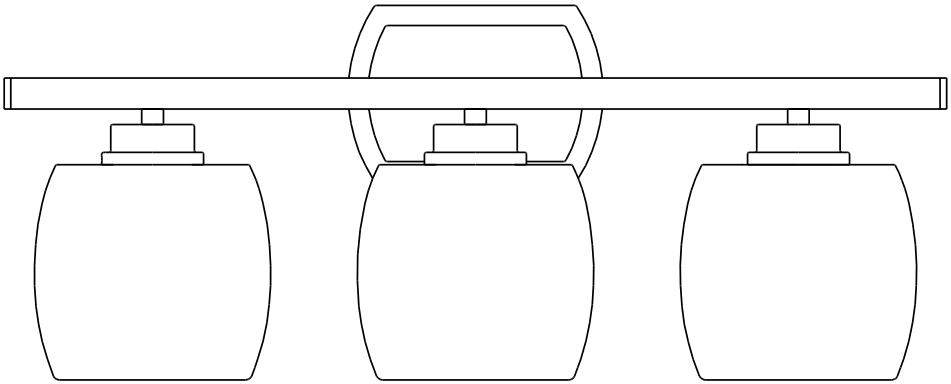

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this vanity. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents **2**
Safety Information **2**
Warranty **2**
What is Covered 2
What is Not Covered 2
Pre-Installation **3**
Planning Installation 3
Tools Required 3
Hardware Required 3
Package Contents 4
Installation **5**
Care and Cleaning **7**
Troubleshooting **7**

Safety Information

WARNING: Carefully read and understand the information given in this manual before beginning the assembly and installation. Failure to do so could lead to electric shock, fire or other injuries which could be hazardous or even fatal.

WARNING: Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn the circuit off.

NOTICE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 855-HD-HAMPTON or visit www.Hamptonbay.com.

Pre-Installation

PLANNING INSTALLATION

Read all instructions before assembly. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

NOTE: Keep your receipt and these instructions for proof of purchase.

NOTE: This fixture can be installed as an up-light or a down-light.

TOOLS REQUIRED


Wire Strippers

Safety Goggles


Ladder

Gloves

Flathead Screwdriver

Phillips Screwdriver

Electrical Tape

Wire Cutters

HARDWARE REQUIRED

NOTE: Hardware not shown to actual size.

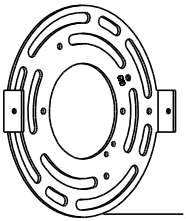
AA

BB


CC

DD

EE

Part	Description	Quantity
AA	Mounting Plate	1
BB	Ground Screw	1
CC	Outlet Box Screw (15 mm)	2
DD	Mounting Screw (12 mm)	2
EE	Wire Connector	3

Pre-Installation (continued)

PACKAGE CONTENTS

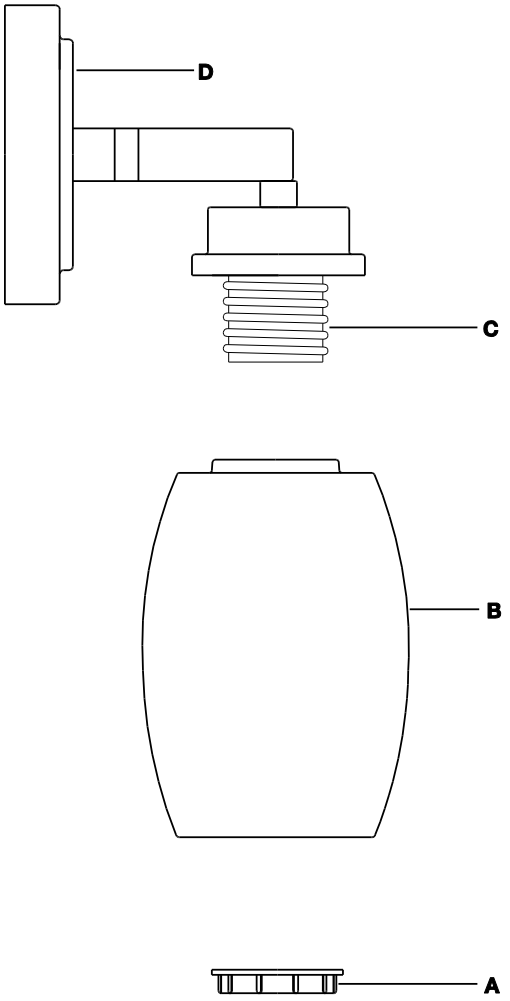

Part	Description	Quantity
A	Socket Ring	3
B	Shade	3
C	Socket	3
D	Wall Plate	1

1 Attaching the mounting plate to the outlet box

- ☐ Mount the mounting plate (AA) to the outlet box using the two outlet box screws (CC).

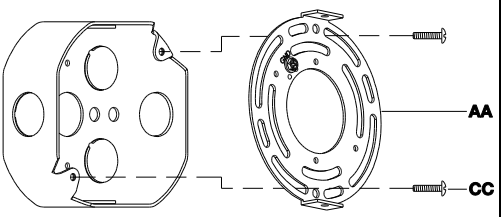

2 Connecting the electrical wires

- ☐ Wrap the ground wire from the fixture around the ground screw (BB) on the mounting plate (AA). Connect the ground wire from the fixture to the ground wire from the outlet box.
- ☐ Connect the white wire from the fixture to the white wire (neutral wire) from the outlet box.
- ☐ Connect the black wire from the fixture to the black wire (live wire) from the outlet box.
- ☐ Cover the three connections using the three wire connectors (EE). Wrap the three wire connections with electrical tape for a more secure connection.
- ☐ Position the wires back inside the outlet box.

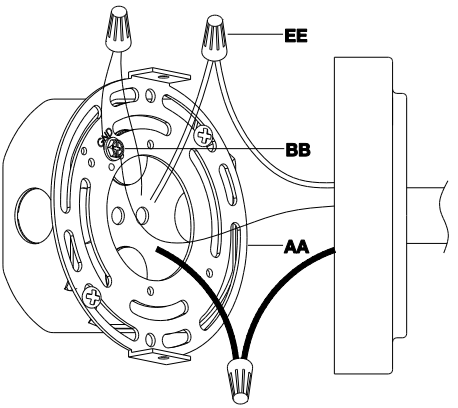

3 Securing the fixture to the outlet box

- □ Align the holes on both sides of the mounting plate (AA) with the holes on both sides of the wall plate (D).
- □ Place the wall plate (D) over the mounting plate (AA).
- □ Screw the mounting screws (DD) through the holes on the wall plate (D) into the holes on the mounting plate (AA).

NOTE: This fixture can be installed as an up-light or a down-light.

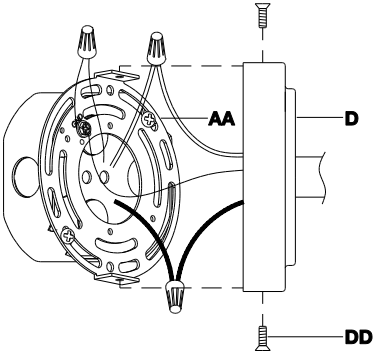

4 Securing the shades

- □ Place the shades (B) over the sockets (C).
- □ Screw the socket rings (A) onto the sockets (C) to secure the shades (B).

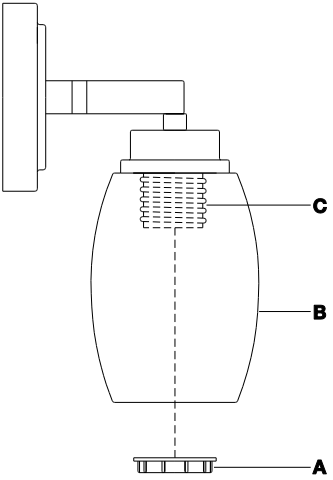

5 Installing the bulbs

- □ Screw the bulbs (sold separately) into the sockets (C).

NOTE: You can use CFL equivalent energy-saving bulbs that do not exceed 13 Watts each (sold separately).

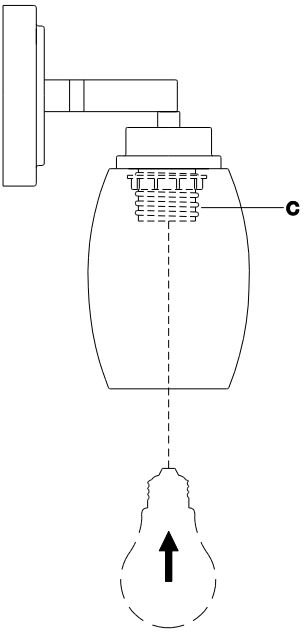

Care and Cleaning

- □ Clean the fixture with a soft, dry cloth.
- □ Do not use any cleaners with chemicals, solvents or hash abrasives.

CAUTION: Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	□ Replace the bulb.
	The power is off.	□ Ensure the power supply is On.
	The circuit breaker is off.	□ Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	Crossed wires or power wire is grounding out.	□ Check the wire connections. □ Contact a qualified electrician or call the Customer Service Team at 855-HD-HAMPTON.

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m.- 6 p.m., EST, Monday-Friday

855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.